




PROFESSIONAL FOIL SHAVER
MODEL ML-9325S

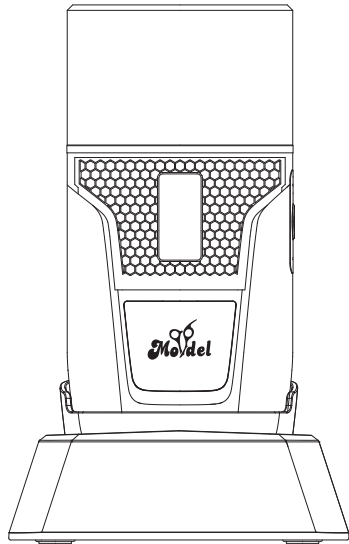


Read before use and keep for future reference.

Important Safeguards

WARNING: Read all instructions before using, charging, cleaning, or servicing the shaver.

- ◆ Use only on healthy, unbroken skin.
- ◆ Do not use with a dented, cracked, loose, or damaged foil.
- ◆ Do not use the shaver while it is charging.
- ◆ Keep the charging port, cable plug, and base contacts dry.
- ◆ Do not immerse or rinse the shaver body unless it is specifically marked as washable.
- ◆ Keep out of reach of children.


Foil Shaver Overview

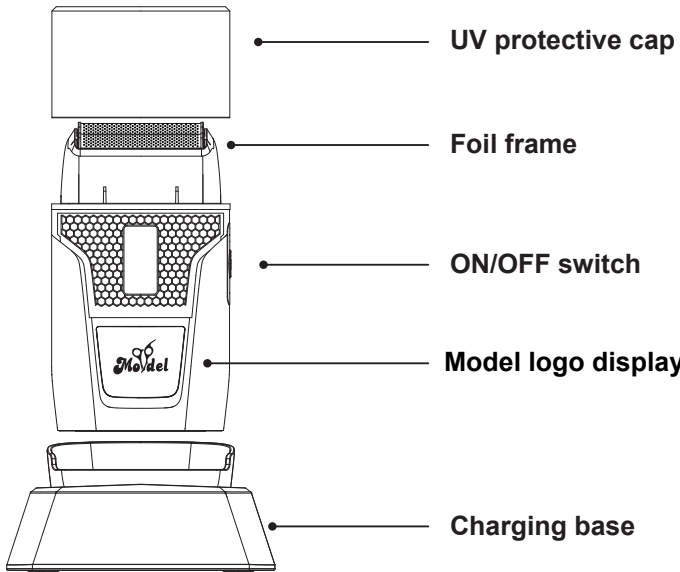

Specifications

Model	ML-9325S	Full charge	120 min +/-10%
Input	DC 5V 1A	Battery	1400mAh lithium
Runtime	≥90 min	Motor speed	9000/9500/10000 rpm
Noise	≤65/70/73 dB	Size	125 x 66.5 x 32 mm

Charging & Battery Care

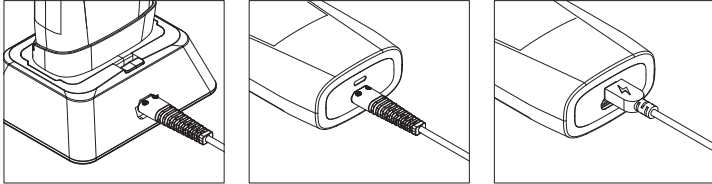

How to recharge

- Charging base: connect the base to a certified DC 5V USB power source, then place the shaver upright on the base.
- USB-DC: insert the DC plug into the shaver, then connect the USB end to a DC 5V 1A source.
- USB Type-C: use a compatible cable if required.

The supplied cable is USB-DC. USB Type-C cable and power adapter are not included.

Charging Precautions

- ◆ Switch off before charging; keep all charging contacts clean and dry.
- ◆ Disconnect when fully charged. Do not use multiple charging methods at the same time.

For long-term storage, recharge the battery at least once every 3 months.

Battery Status & Travel Lock

Battery status light

GREEN - STEADY	Higher remaining charge
YELLOW - STEADY	Medium remaining charge
RED - FLASHING	Below 10%; recharge soon

While charging

RED flashing -> YELLOW flashing -> GREEN flashing -> GREEN steady (fully charged).

Travel lock

- With the shaver switched off, press and hold the ON/OFF switch for about 3 seconds.
- The logo status light flashes to confirm that the travel lock is active.
- Press and hold again for about 3 seconds to unlock.

The Model logo window is a color battery-status light; it does not show a numeric percentage.


Shaving & Cleaning

Before and during shaving


- ◆ Use only on healthy skin. Trim long hair first with a clipper or trimmer.
- ◆ Check that the foil is clean, dry, and undamaged.
- ◆ Keep the foil flat against the skin and move slowly against hair growth.
- ◆ Use light pressure; do not repeatedly shave irritated areas.

Cleaning instructions

- Switch off and disconnect the shaver from the power source.
- Pull the foil frame straight up to remove it from the shaver body (Fig. 1)
- Brush loose stubble from the foil frame and inner cutters (Fig. 2)
- If rinsing is required, rinse only the removable foil assembly under clean water (Fig. 3)
- Allow all parts to dry completely before reassembly and before fitting the UV cap.

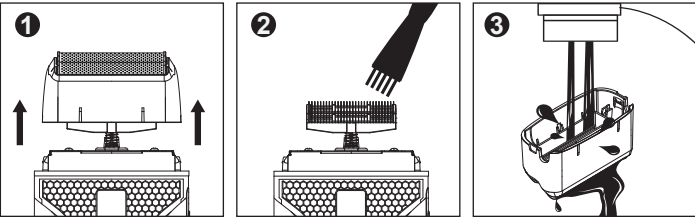

UV Sanitizing

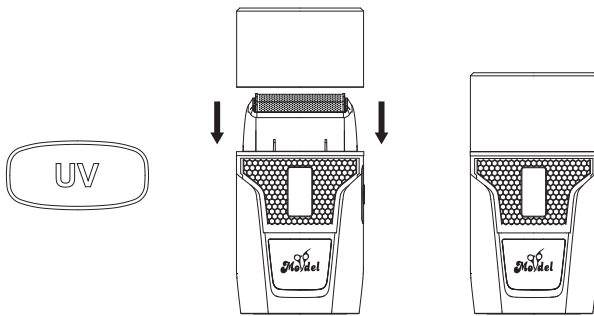

How to use the UV function

- Switch off the shaver and remove loose hair from the shaving head.
- Dry the shaving head completely.
- Fit the protective cap fully to start the UV cycle.
- The cycle runs for about 3 minutes, then switches off automatically.

Do not look directly at the UV lamp. UV treatment does not replace manual cleaning.

Tested UV performance

Laboratory test: 97.6%-99.8% reduction across E. coli 8099, S. aureus ATCC 6538, and C. albicans ATCC 10231 after 3 minutes at 1 cm. Report WJ2025001261E; results apply only to the tested sample and conditions.

Foil & Cutter Care

Foil handling

- ◆ The shaving foil is delicate. Handle it gently.
- ◆ Do not press hard on the foil during shaving or cleaning.
- ◆ Replace the foil if it is dented, cracked, loose, or worn.
- ◆ Never use the shaver with a damaged foil.

Cutter care

- ◆ Brush loose stubble from the inner cutter area after every use.
- ◆ Rinse only the removable foil assembly as described in the cleaning instructions.
- ◆ Allow all parts to dry completely before fitting the UV cap.
- ◆ Keep the UV cap window and contact area clean and dry.

Use only replacement foils and cutters compatible with model ML-9325S.

Troubleshooting & Storage

Issue	Check / Solution
Will not start	Unlock; recharge; check source
Pulls hair	Clean foil/cutters; trim long hair
Not shaving closely	Clean; replace worn or damaged foil
Unusual noise	Switch off; clean and refit foil
UV will not start	Dry head; refit cap fully

Storage

- ◆ Switch off, clean, and dry the shaver before storage.
- ◆ Install the protective cap and store in a dry, ventilated place.
- ◆ Keep the cable loosely coiled and away from heat or heavy objects.

Battery & disposal

- ◆ Do not put the product or built-in battery in household waste.
- ◆ Do not burn, puncture, crush, short-circuit, or dismantle the battery.
- ◆ Take the complete product to an approved e-waste or battery collection point.

Battery removal should be performed only when required by local rules or by qualified personnel.

Warranty and Service



Activate your 1-year warranty

Scan the QR code to register your product and activate the 1-year warranty. Keep your Amazon order ID and product model ready when requesting service.

Warranty coverage

- ◆ Covers manufacturing defects under normal use.
- ◆ Proof of purchase may be required.
- ◆ Consumable parts are excluded unless defective on arrival.
- ◆ Misuse, impact, unauthorized repair, improper charging, and poor storage are not covered

Warranty Card

Product	Foil Shaver
Brand	Model
Model	ML-9325S
Warranty	12 months from purchase
Purchase Date	
Order ID	
Customer Name	
Email	
Tel	
Issue	

