
BARBER PROFESSIONAL 2-TOOL SYSTEM

Hair clipper / Hair trimmer

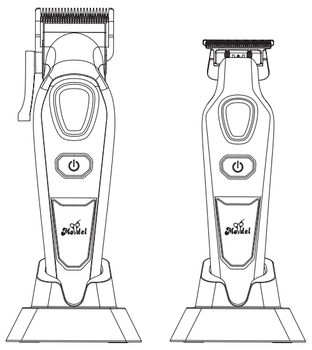

Read this manual before use. Keep it for future reference and after-sales service.

Package Contents

Item	Qty
Hair clipper with blade guard	1
Hair trimmer with blade guard	1
Charging base	2
Hair clipper guide combs	6
Hair trimmer guide combs	5
USB-DC charging cable	2
Blade oil bottle	2
Cleaning brush	2
Styling comb	1
Barber cape	1
User manual	1

Important Safeguards

WARNING: Read all instructions before using, charging, cleaning, or servicing either tool.

- Use only on healthy, unbroken skin.
- Do not use a tool with bent, broken, loose, or damaged blade teeth.
- Switch off and disconnect power before changing combs, cleaning, or servicing the blades.
- Keep charging ports, cable plugs, and base contacts dry.
- Do not immerse or rinse either tool unless it is specifically marked as washable.
- Keep out of reach of children.

Before First Use

1. Check both tools, blade guards, guide combs, charging cables, and bases for damage or missing parts.
2. Fully charge the hair clipper and hair trimmer before first use.
3. Brush away any loose packaging dust from the blades and guide combs.
4. Apply one small drop of blade oil to each blade, then run the tool for 3-5 seconds.
5. Fit the correct guide comb and start with a longer length if you are unsure.

Battery Status Light



GREEN - STEADY	Higher remaining charge
YELLOW - STEADY	Medium remaining charge
RED - FLASHING	Below 10%; recharge soon

While charging

RED flashing -> YELLOW flashing -> GREEN flashing -> GREEN steady (fully charged).


Basic Parameters

Parameter	Hair Clipper	Hair Trimmer
Model	ML-8536K	ML-8236T
Input	DC 5V 1A	DC 5V 1A
Charging	Base / USB-DC / Type-C compatible	Base / USB-DC / Type-C compatible
Runtime	≥150 min	≥120 min
Full charge	≤3.5 h	≤2 h
Battery	2500mAh lithium	1400mAh lithium
Rated power	5 W	5 W
No-load speed	8,000 rpm +/-10%	7500 rpm +/-10%
Noise	≤68 dB	≤68 dB
Size	176 x 57 x 44 mm	157 x 42 x 38 mm

No-load speeds are taken from the supplied product specification sheets.
Actual runtime may vary with hair type, blade condition, and operating load.

Charging & Battery Care

How to recharge

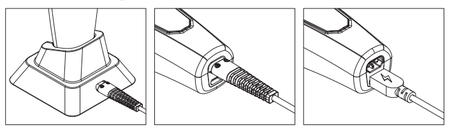

1. Charging base: connect the base to a DC 5V USB power source, then place the device upright on the matched base.
2. USB-DC: insert the DC plug into the charging port, then connect the USB end to a DC 5V 1A adapter, power bank, or USB outlet.
3. USB Type-C: use your own compatible Type-C cable if needed. USB Type-C cables are not included.


Charging rules

1. Switch off the device before charging.
2. Keep the charging port, cable plug, and base contacts clean and dry.
3. The logo display area or charging base may show charging status while power is connected.
4. Disconnect after full charge. Do not use multiple charging methods at the same time.

Device	Approx. full charge
Hair clipper	≤ 3.5 h
Hair timmer	≤ 2 h

Corded operation is supported for both tools.
Use only a compatible DC 5V source. Keep the tool, cable, hands, and contacts dry. Switch off before connecting or disconnecting power.

Hair Clipper Overview

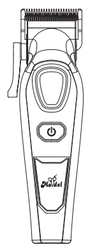


ML-8536K hair clipper

Use the hair clipper for bulk cutting, tapering, fading, and blending larger hair sections.
The adjustable taper lever changes the blade position for closer or softer blending work.

Hair Clipper part	Function
Fixed blade	Guides hair and sets the cutting edge
Moving blade	Moves side to side to cut hair
Taper lever	Adjusts close-to-long blade position
ON/OFF switch	Starts and stops the hair clipper
Battery-status logo	Shows battery and charging status
Charging base	Holds and charges the hair clipper upright


Hair Clipper Guide Comb Sizes

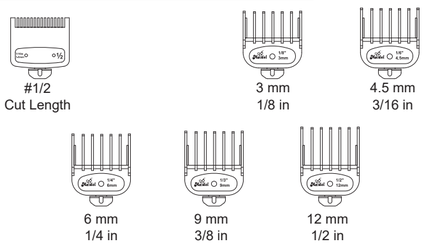

Match the comb to the printed size mark before cutting. Start longer if you are unsure.

Hair Clipper Comb Installation

Attach a hair cliper guide comb

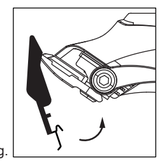

1. Switch off the hair clipper before changing
2. combs. Hold the comb with the teeth facing upward and forward.
3. Hook the front edge of the comb over the fixed blade.
4. Press the rear of the comb down until it clicks or sits firmly.
5. Check that both sides are locked before cutting.


Remove the hair clipper comb

1. Switch off the hair clipper.
2. Hold the clipper body firmly.
3. Lift the rear of the comb first, then slide it away from the blade.

A loose hair clipper comb can cause uneven cutting.
Reattach it before continuing.

Taper Lever & Blending

Taper lever function

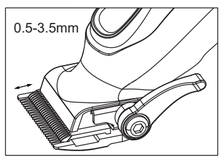


- Lever up: closer cutting position.
- Lever down: longer cutting position.
- Half positions help soften blend lines between comb lengths.
- Move the lever several times after oiling to distribute oil.

Fade workflow

1. Set a base length with a guide comb.
2. Use a shorter comb below the first section.
3. Open the lever to soften the transition.
4. Close the lever only for final detail passes.

Hair Clipper Blade Removal

Remove the hair clipper blade set

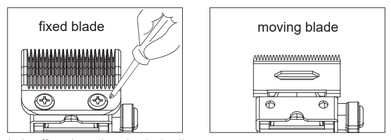


1. Switch off and unplug the hair clipper.
2. Remove any guide comb.
3. Use a suitable screwdriver to turn both blade screws counterclockwise.
4. Support the blade set while loosening the screws so the parts do not fall.
5. Lift away the fixed blade, then remove the moving blade from the blade holder.
6. Keep the two screws and blade parts together for reassembly.

Blade screws are small. Work on a clear, stable surface.

Hair Clipper Blade Alignment

Hair clipper blade installation

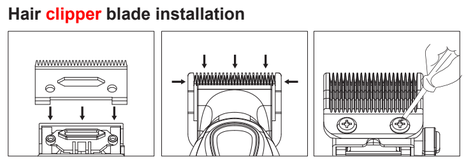

1. Place the moving blade on the blade holder and drive slot.
2. Place the fixed blade over it and align the screw holes.
3. Insert both screws loosely; do not fully tighten yet.
4. Set the taper lever to the closest cutting position.


5. Adjust the moving blade so its teeth sit about 0.5 mm behind the fixed blade tips.
6. Make sure the left and right teeth are even, then tighten both screws evenly.

Final safety check

- No moving blade tooth should extend beyond the fixed blade tips.
- Both blade edges should look straight and parallel.
- Run the clipper briefly after oiling. Stop and realign if it vibrates heavily, sounds abnormal, or feels rough.

Incorrect blade alignment may scratch skin or pull hair.
Oil the blade and test briefly after adjustment.

Hair Clipper Blade Lubrication

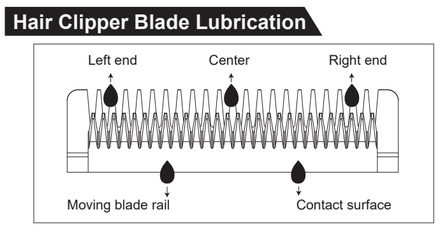

Blade lubrication protocol

- Place one small drop on the left blade end.
- Place one small drop in the center of the blade teeth.
- Place one small drop on the right blade end.
- Add a light film where the moving blade slides against the fixed blade.
- Move the taper lever several times to spread oil.


Use clipper blade oil only. Too much oil may attract hair and dust.

Hair Clipper Cleaning & Care

1. Switch off and unplug.
2. Remove the hair clipper guide comb.
3. Hold the blade downward and brush loose hair away from the teeth and hinge area.
4. Oil the blades, run the hair clipper for 3–5 seconds, then turn it off.
5. Wipe away excess oil with a dry cloth.
6. Install the blade guard before storage.

- Do not use hair oil, grease, solvents, bleach, or abrasive cleaners.
- Do not over-oil; excess oil may enter the motor area.

Hair Trimmer Overview

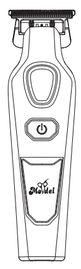


ML-8236T hair trimmer

The hair trimmer is for edges, beard shaping, line work, and close trimming around smaller areas.
Use the hair trimmer after clipper cutting to clean the neckline, sideburns, beard edges, and detail areas.

Hair trimmer part	Function
Fixed blade	Guides hair and sets the cutting edge
Moving blade	Moves side to side to cut hair
ON/OFF switch	Starts and stops the hair trimmer
Battery-status logo	Shows battery and charging status
Charging base	Holds and charges the hair trimmer upright

Hair Trimmer Guide Comb Sizes

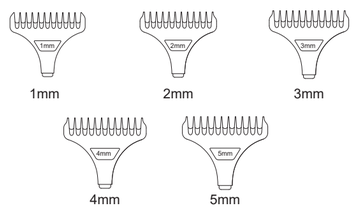

For the ML-8236T hair trimmer only. Start with a longer comb if the final length is uncertain.

Using the Hair Trimmer

Before trimming

- Choose a hair trimmer guide comb when an even short length is required. Use the bare trimmer blade only for outlining and detail work.
- Make sure skin is clean, dry, and free from lotion or gel.

With a guide comb


1. Attach the selected 1-5 mm trimmer comb securely.
2. Place the comb teeth flat against the beard or hair surface.
3. Move slowly against hair growth in short, even strokes.
4. Brush loose hair from the comb if cutting speed slows.

Bare-blade outlining

1. Remove the guide comb for edge lines only.
2. Touch the blade edge lightly to the hairline; do not press into skin.
3. Use short strokes around the neckline, sideburns, mustache, and beard edges.
4. Check the shape often and clean loose hair from the blade.


The hair trimmer is for finishing details. Use the hair clipper first for large cutting areas.

Hair Trimmer Blade Removal & Installation

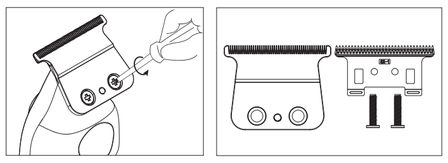

Remove

1. Switch off and disconnect the hair trimmer; remove the guide comb.
2. Support the blade assembly then loosen and remove both screws.
3. Remove the fixed blade, then the moving blade. Keep all parts and screws together.

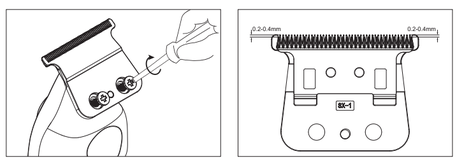

Install & Align

1. Engage the moving blade with the blade holder and drive slot.
2. Position the fixed blade, align the holes, and insert both screws loosely.
3. Set the moving blade 0.2-0.4 mm behind the fixed blade; no tooth may protrude.
4. Tighten evenly, oil the blade, and run for 3-5 seconds away from skin.

Do not push, pull, or pry the complete blade head away from the body. Blade removal and installation are not recommended for untrained users. Perform this procedure only under the guidance of a qualified professional.

Troubleshooting

Issue	Check / Solution
Will not start	Recharge; check cable and power source
Pulls hair	Clean and oil blade; reduce hair load
Cuts unevenly	Attach comb firmly; move slowly
Loud noise	Oil blade; check for trapped hair
Skin scratch	Check blade alignment; use less pressure
Short runtime	Charge fully; clean blade friction points
Blade assembly loose	Switch off; check screws and alignment

Storage & Disposal

Storage

- Switch off and clean all tools before storage.
- Use blade guards or caps where supplied.
- Store in a dry, ventilated place away from children.
- Keep cables loosely coiled and undamaged.
- Keep away from high heat, dust, and heavy objects.

Battery & disposal

- Both tools contain built-in rechargeable lithium-ion batteries.
- Do not dispose of the product or battery with household waste.
- Do not burn, puncture, crush, short-circuit, or dismantle the battery.
- At end of life, take the product to an approved electronic waste or battery recycling collection point.
- Follow local regulations for safe recycling. Battery removal should be performed only when required by local disposal rules or by qualified personnel.

Improper battery disposal may cause fire, injury, or environmental harm.

Warranty and Service

Activate your 1-year warranty

Scan the QR code to register your product and activate the 1-year warranty.
For faster service, keep your Amazon order ID and product model ready.

Warranty Coverage

- Covers manufacturing defects under normal use.
- Proof of purchase may be required.
- Consumable parts are excluded unless defective on arrival.
- Damage from misuse, impact, unauthorized repair, improper charging, or poor storage is not covered.

Scan the QR code for after-sales support and warranty activation.

Warranty Card

Product	Hair Clipper / Hair Trimmer
Brand	Model
Models	ML-8536K / ML-8236T
Warranty	12 months from purchase
Purchase Date	
Order ID	
Customer Name	
Email / Phone	
Issue Description	